

---

# How To Setup The Direct Thermal Barcode Printer?

**Brand: XPRINTER**

**Model: XP-460B**

---

\*Please keep as your reference\*


# CONTENT

Instructions:

Clicking at each topic below will bring you to the page directly.



<b>A) Equipment Checklist</b>	<b>3-4</b>
<b>B) Printer Parts</b>	<b>5</b>
<b>C) Download A Driver File</b>	<b>6</b>
<b>D) Setting Up The Printer</b>	<b>7-8</b>
<b>E) To Place The New Label</b>	<b>9</b>
<b>F) How To Install?</b>	<b>10-14</b>
<b>G) Setup The Printer Properties</b>	<b>15-18</b>

# A) Equipment Checklist.

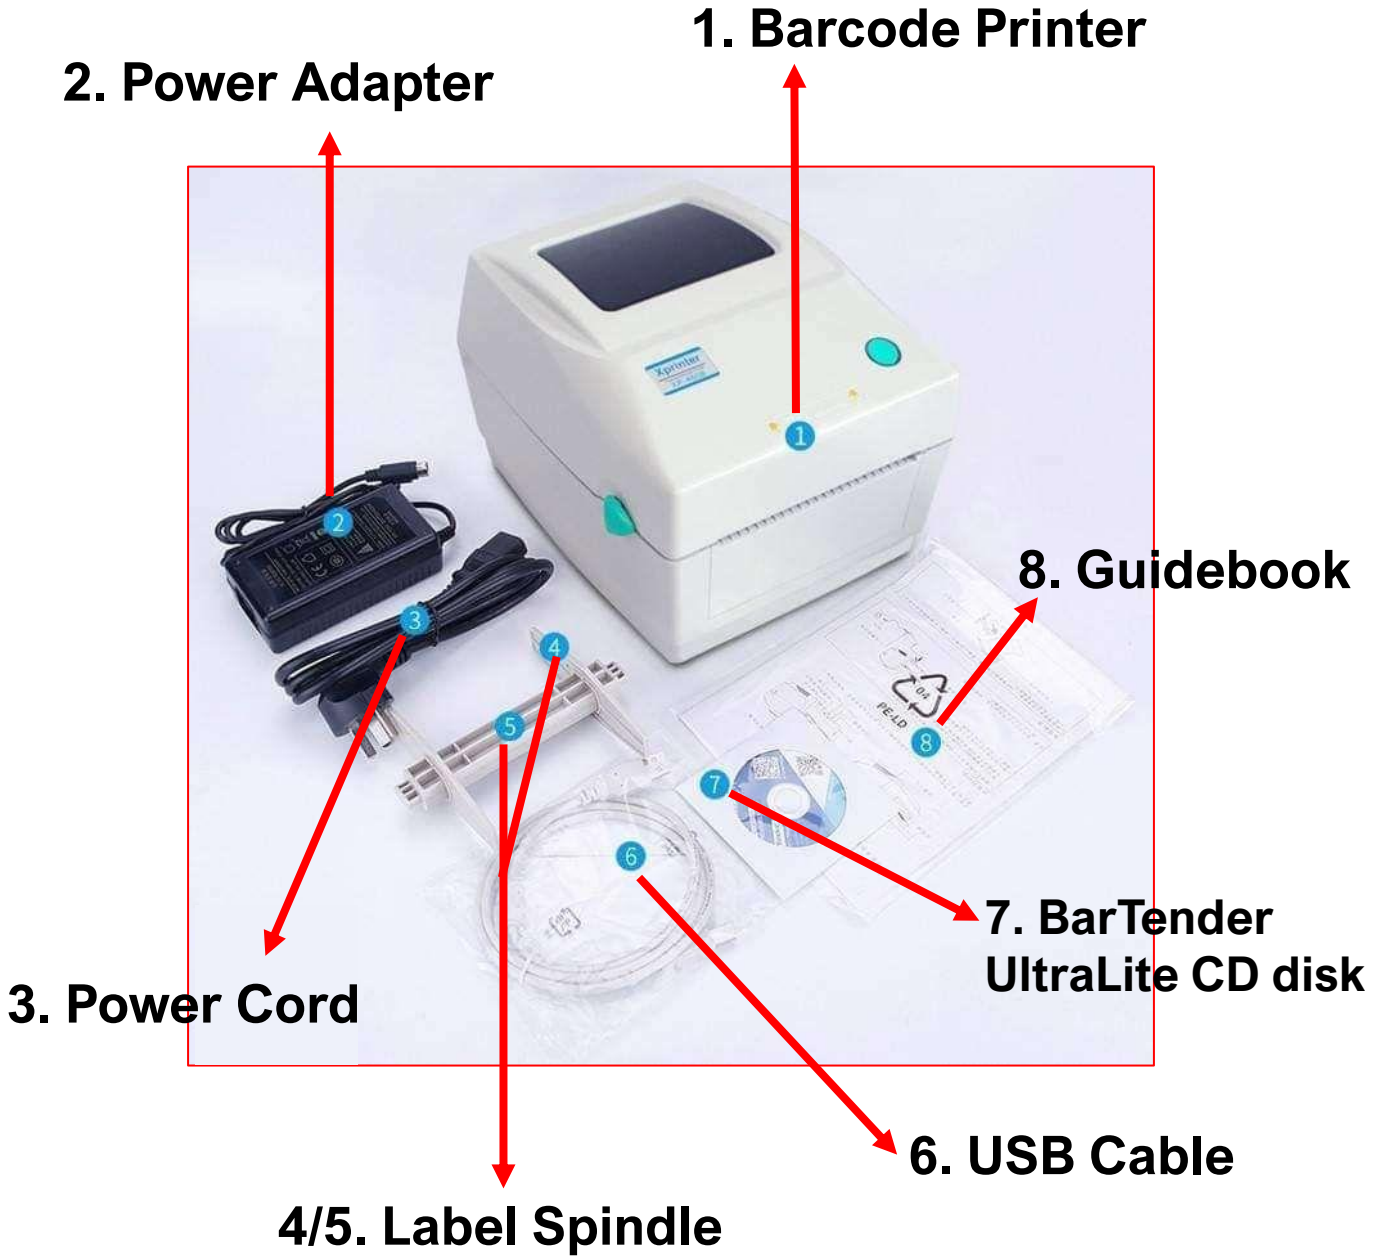

# A) Equipment Checklist.

## External Roll Mount

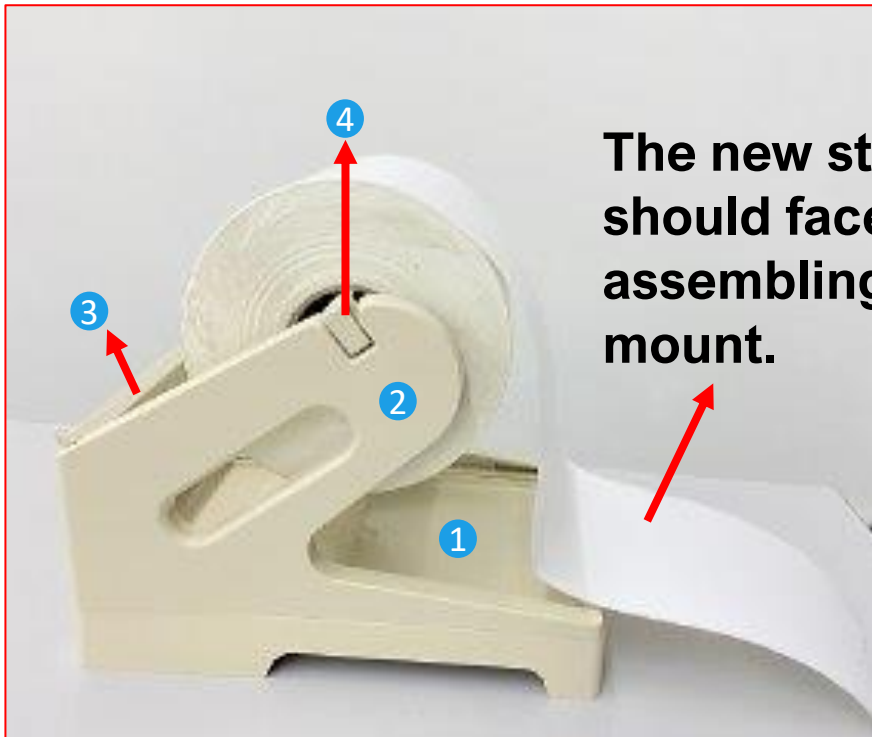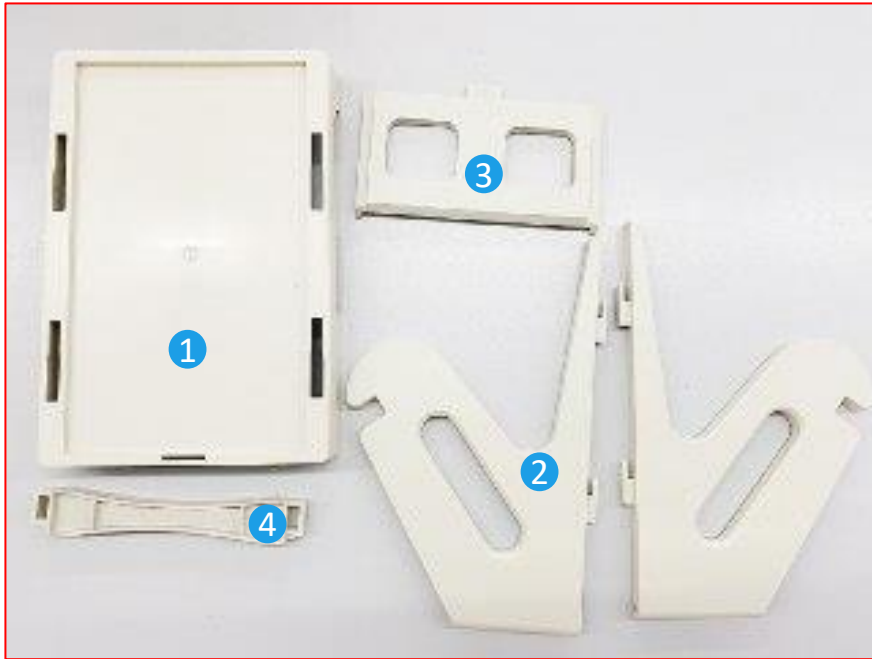

**The new sticker/label should face up after assembling the roll mount.**

## B) Printer Parts.

### Front

Clear Window

Feed Button with  
LED Indicator Light

Top Cover  
Open Lever

Front  
Panel



### Back

Label Tray  
(Insert new  
label here  
facing up).

Power  
Switch

RS-232C  
DB-9  
Interface

SD Card

Power Jack

USB Interface




## C) Download A Driver File.

### Step 1


From the link given [skynet.com.my/xprinter](http://skynet.com.my/xprinter)

The user can click **Driver** to start download the file.

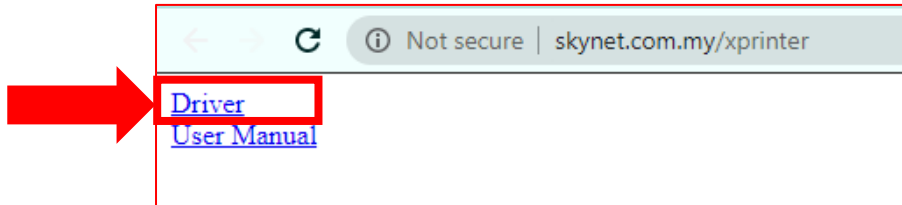


### Step 2

Once click, it will automatically be downloaded.




### Step 3

You can save the file by creating a new folder. For example, save the file at the 'Data (D:)'. **DATA (D:)**



### Step 4

Once you already save the file inside the folder that you created. Right-click at that zip file and click **Extract Here** to extract the file.

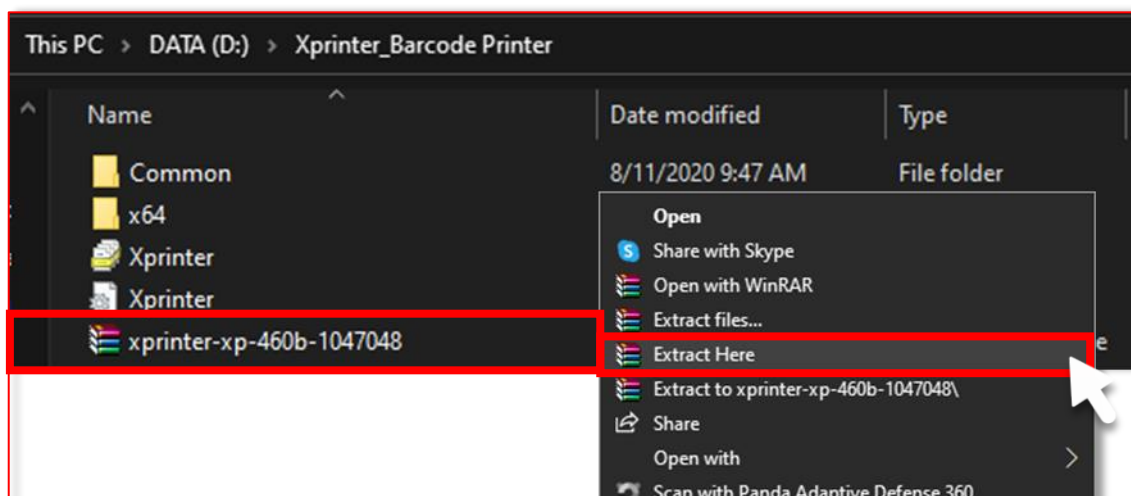

## D) Setting Up The Printer.

### **Step 1**

Place the printer on a flat, secure surface.



### **Step 2**

Plug in with **USB Cable** and **Power Adapter** to connect the printer to a computer.



### Step 3

Turn **On** the Printer:

1. On this Power Switch button.



The Symbol meaning:

I - On

O - Off

2. Press this feed button.  
The LED indicator light around this button will light up.





## E) To Place The New Label.



### Step 1

Make sure the new label is facing up.

**Step 2**  
Insert the new label into the label tray.




### Step 3

Hold both sides and push upward to open the top cover.



### Step 4

Secure the sticker paper with this 2 clips.  
Then, close the top cover.

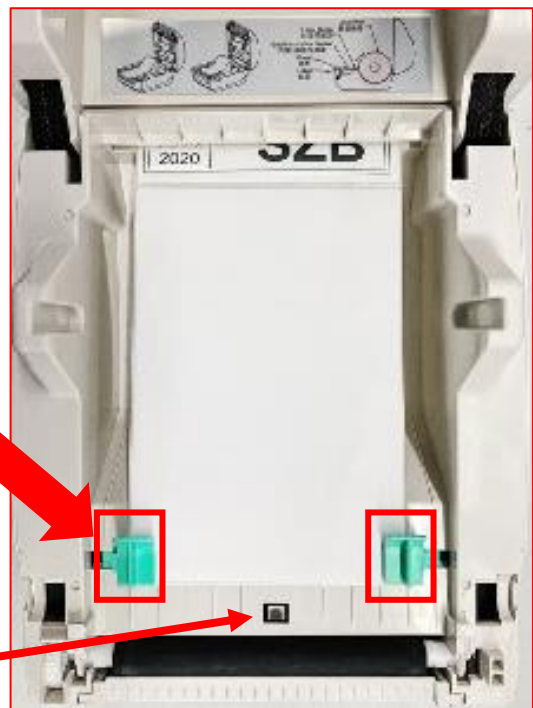


**Sensor detector**

# F) How To Install?


## Step 1

Go to the **Setting** and under the **Devices**, click **Printer & Scanners**. Then, click **Add a Printer or Scanner**.

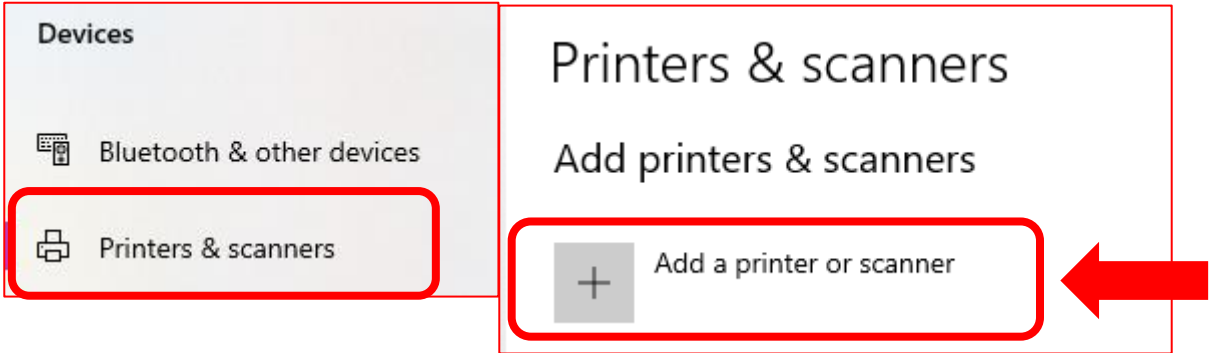


## Step 2

After that, click at **'The printer that I want isn't listed'**.

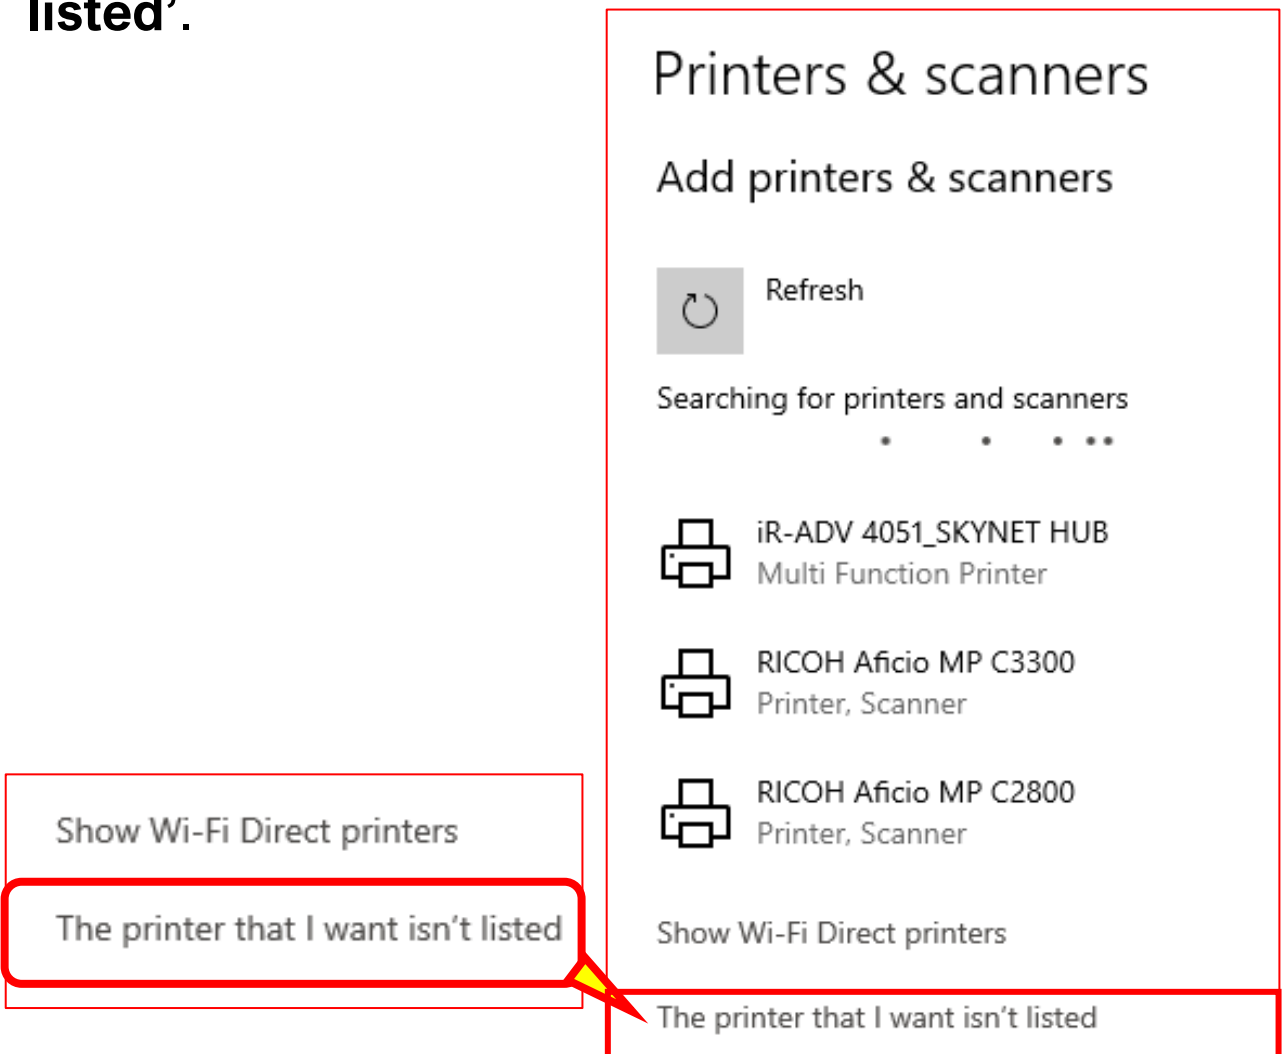

### Step 3


Choose 'Add a local printer or network printer with manual settings'. Then, click **Next** button.

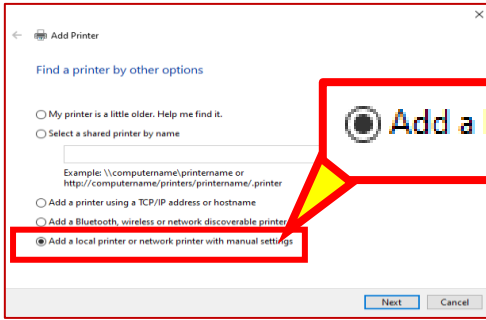

**Add a local printer or network printer with manual settings**

### Step 4


Click 'Use an existing port' and choose 'USB001 (Virtual printer port for USB)'. Then click **Next** button.

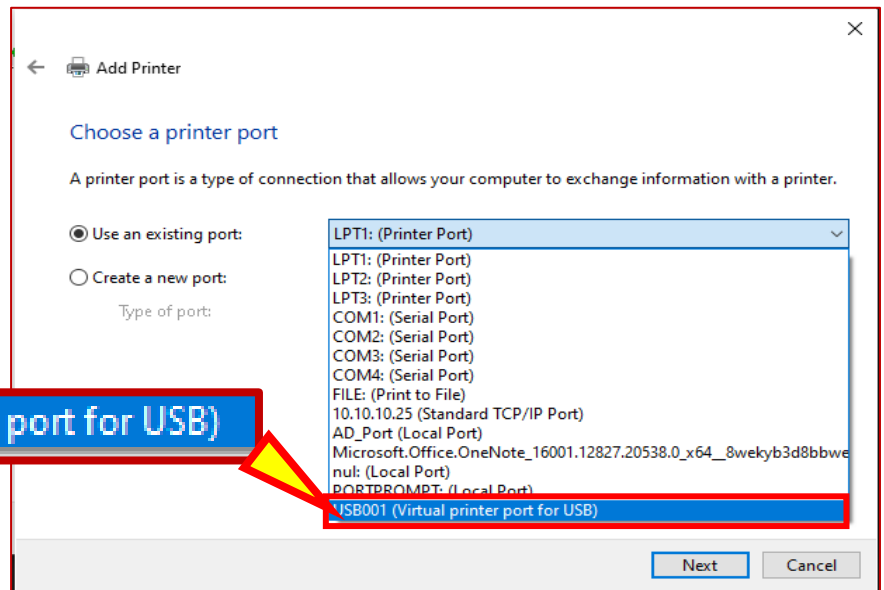

**USB001 (Virtual printer port for USB)**


### Step 5

Click **Have Disk**.

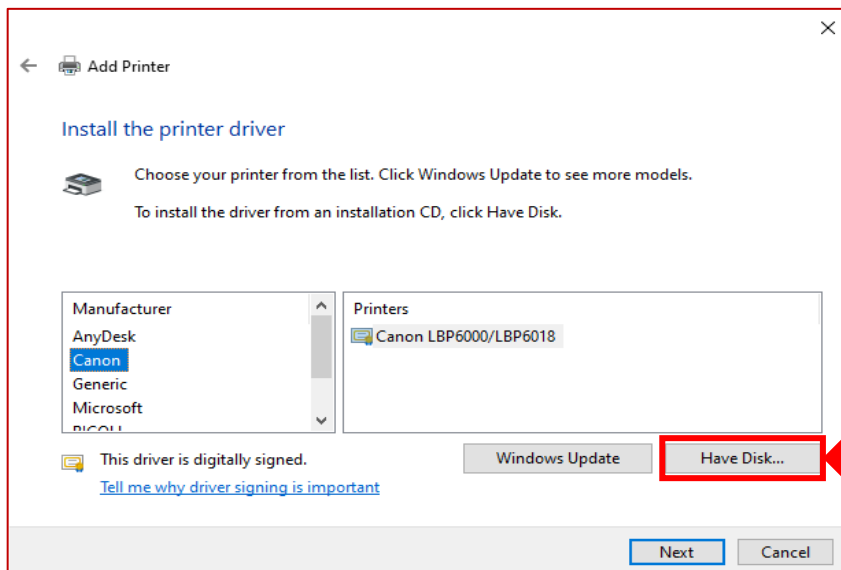


## Step 6

Click **Browse** to select the files.

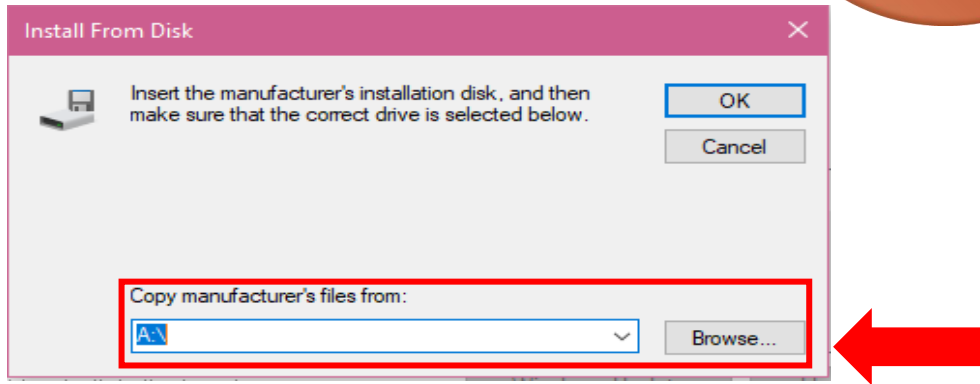


## Step 7

Choose the file that already been extract earlier and click at the file as shown below. Then click **Open**.

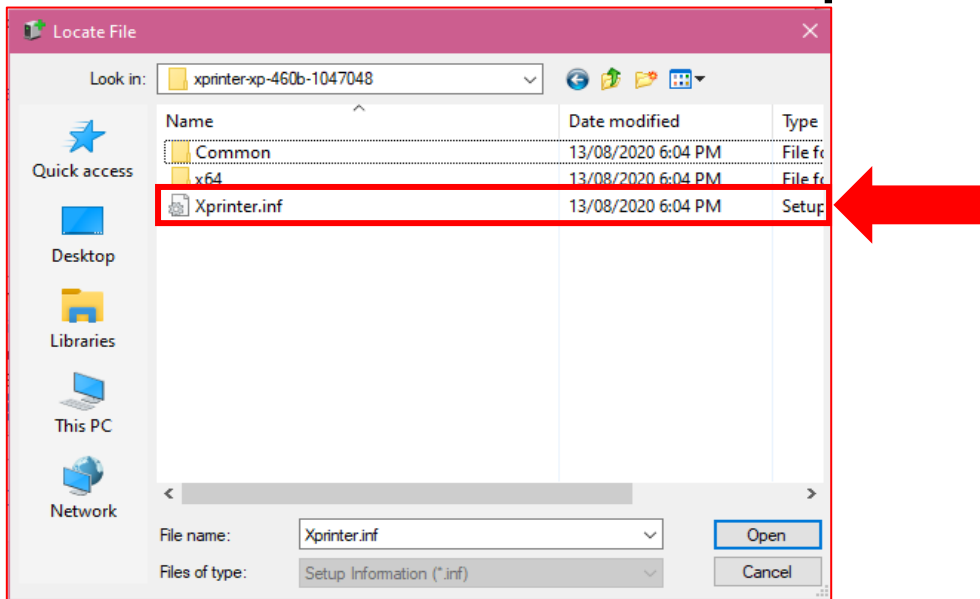


Once done, click **OK**.

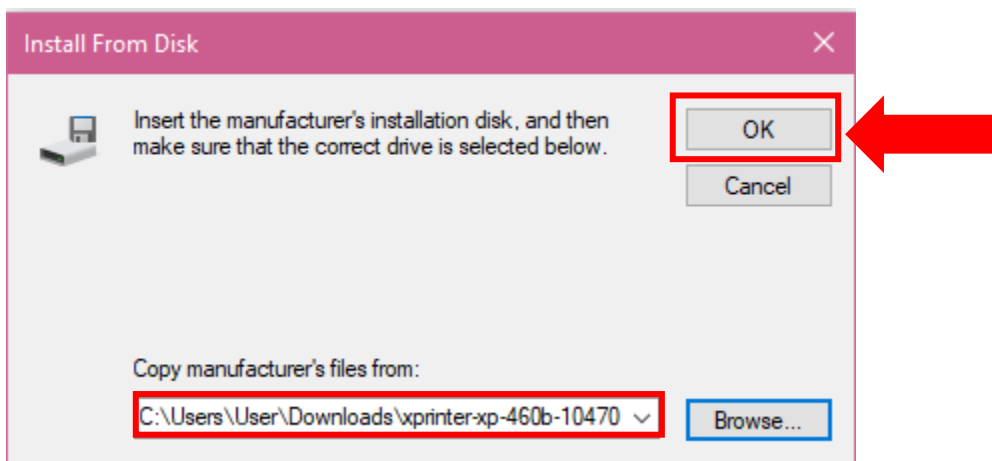


## Step 8

Choose the Printer Model and click **Next** button.

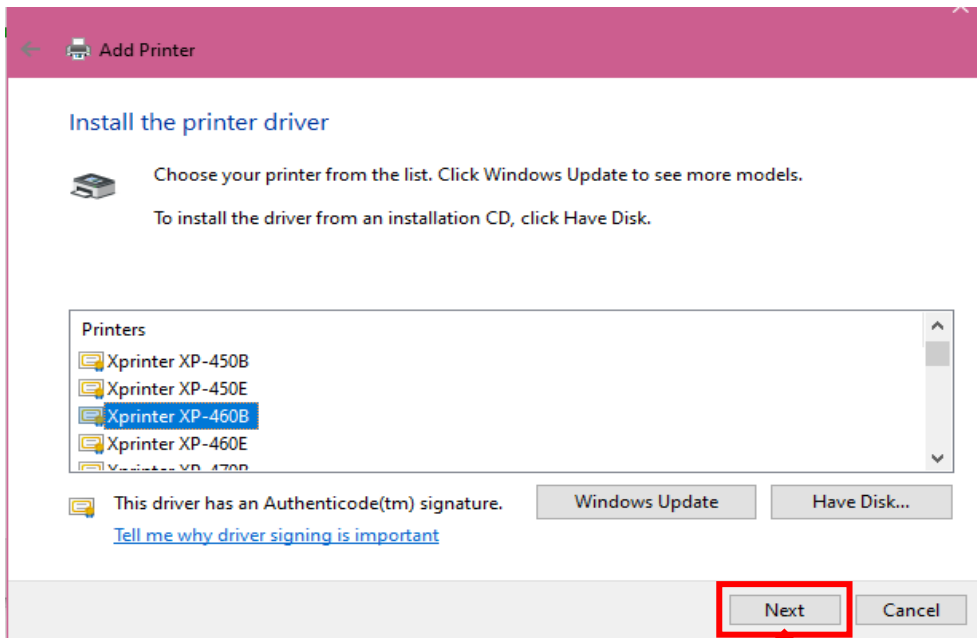


## Step 9

Click **Next** button.

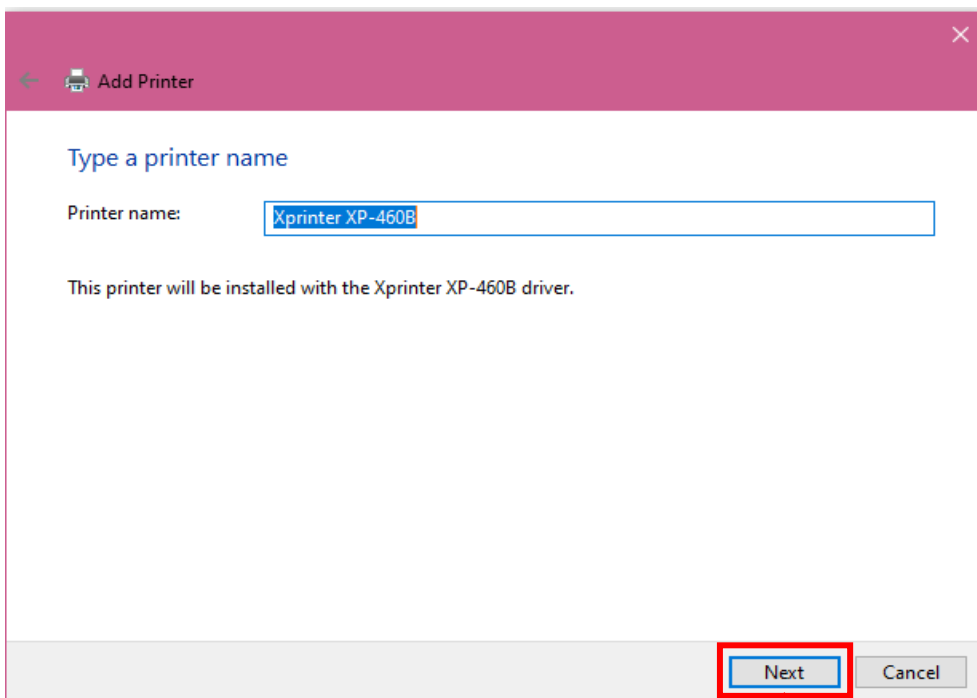


## Step 10

Click the **Install** button.

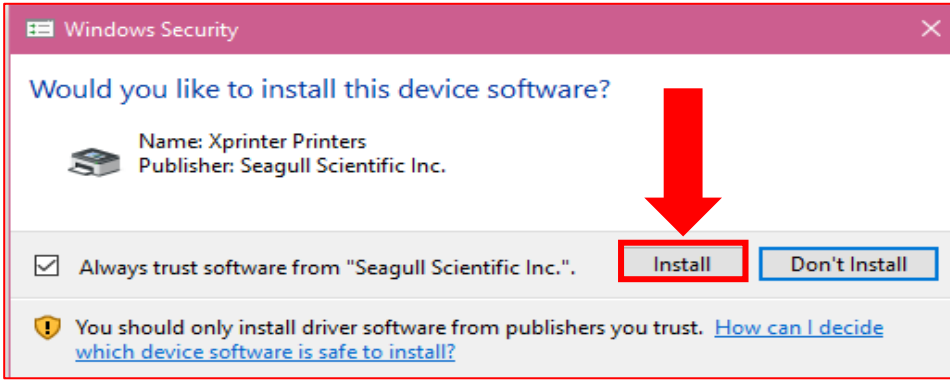


## Step 11

Then, click 'Do not share this printer' and click **Next** button.

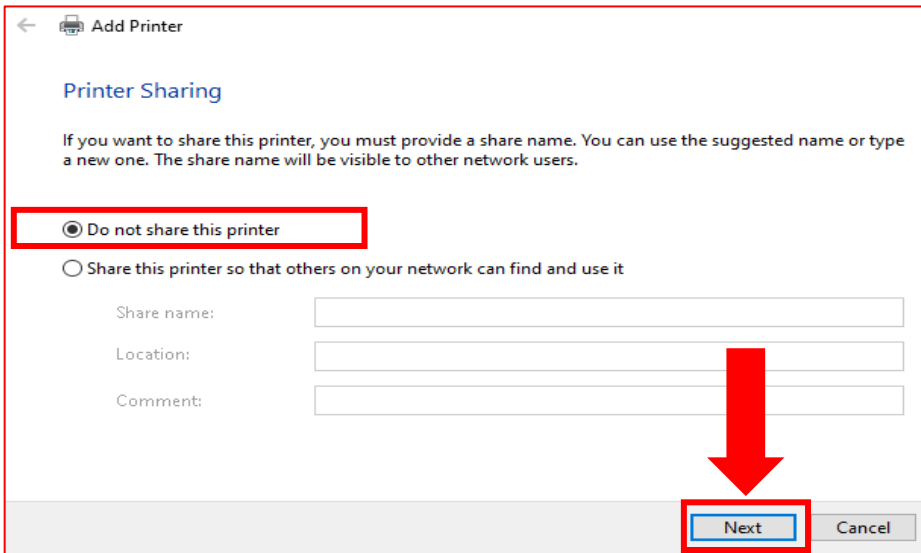

## Step 12


Click the **Finish** button.

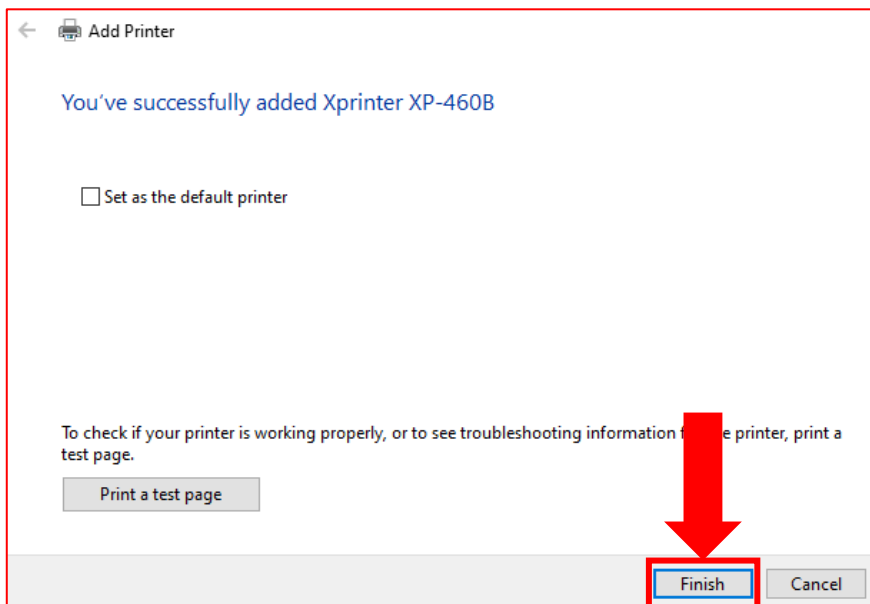

# G) Setup The Printer Properties.


## Step 1

At **Printer & Scanner Setting**, click at **Manage** button.

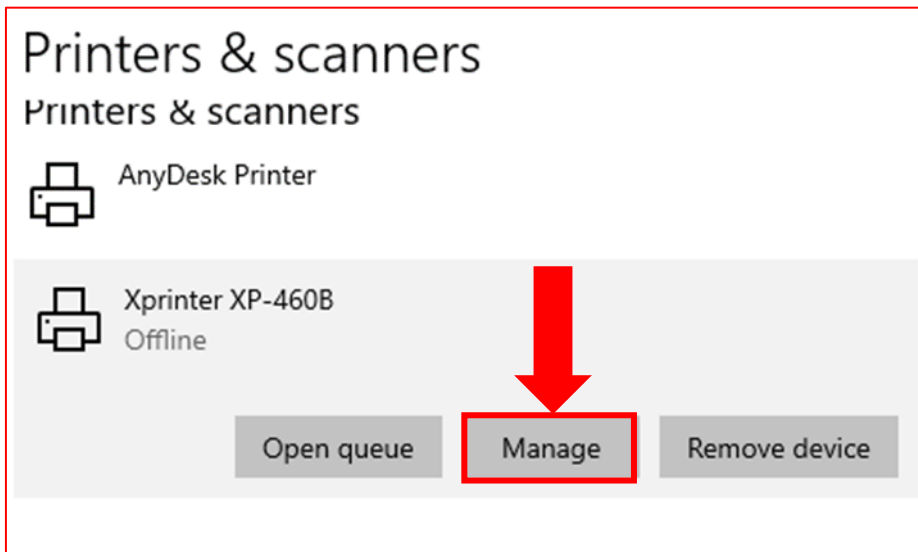


## Step 2

Click **Printer Properties** to setup the sizing before print.

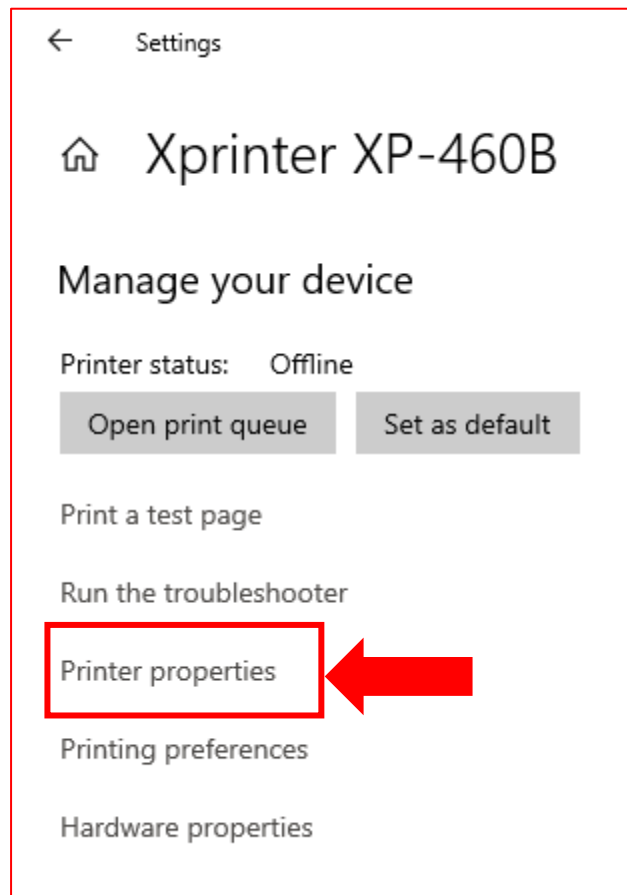


### Step 3

Click **Preferences** to setup the sizing before print.

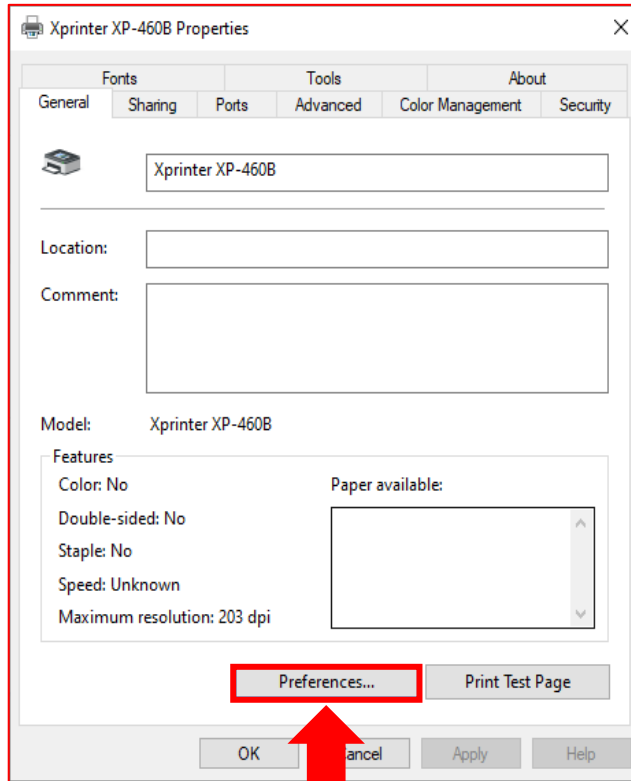

### Step 4


Under the Page Setup tab. Choose the sticker size which is '4x6' (4.00 in x 6.00 in). After choose, click **Apply** button.

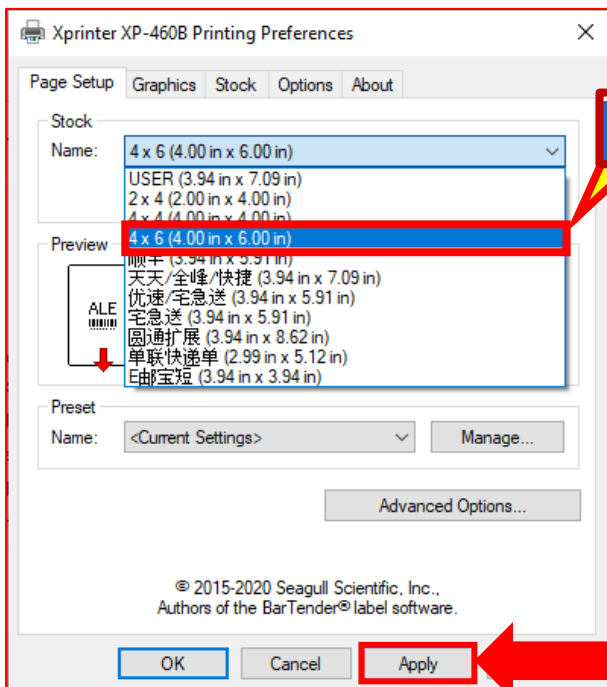




## Step 5

Then, click **OK**.

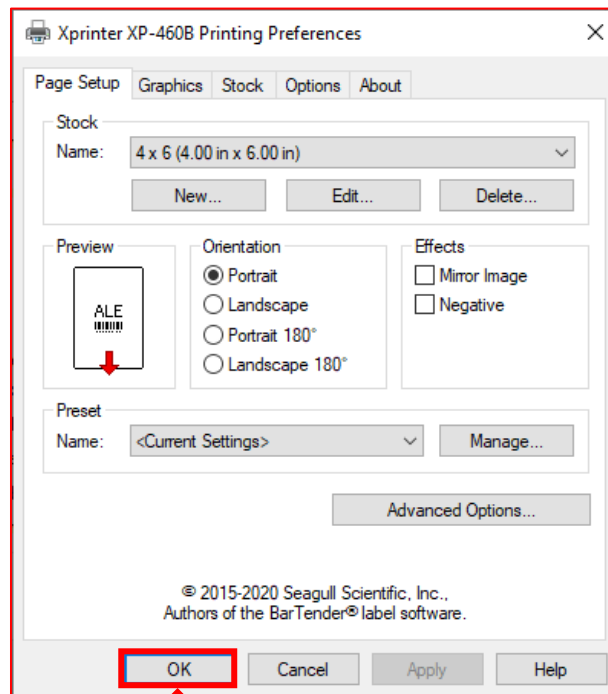


## Step 6

After done setup, you can click **Print test Page** to see whether it's work or not.

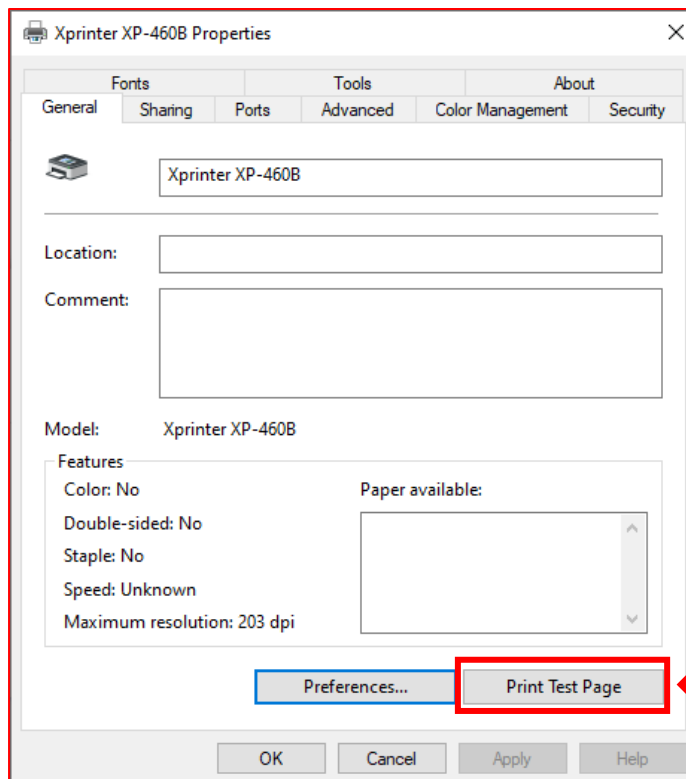

## Step 7

Once done, you can start to print out all the eAWB. Under the destination, choose **Xprinter XP-460B**. Make sure the paper size is **'4x6'** before click the **Print** button.

<b>SKYNET</b> <small>Fast • Accurate • Reliable</small>		
<b>ETEST00032318</b>		
<b>SENDER / PENGIRIM ACCOUNT: SZB0119200759</b>		
<b>Test Company2</b> 4 Jalan SS 13/5 Subang Jaya Selangor		
Contact: tan	Tel: 0356239074	
Shipper Ref:	Dept:	
<b>RECEIVER / PENERIMA</b>		
<b>Angie Test</b> ABC Trading Sdn Bhd 14 Jalan Tandang Petaling Jaya Selangor		
Tel: <b>0123456798</b>		Postcode: 47200
Contents: trst	Dim(cm): 11.0x11.0x11.0	
PIECES: 1 Parcel WT(kg): 1.00	Vol Wt: 0.27	
<small>By printing this AWB, I agree to Skynet's Terms &amp; Conditions, and a copy of the terms can be provided to me upon request. Strictly no cash, prohibited &amp; dangerous goods. For East Malaysia &amp; Intl, attach original &amp; 3 copies of commercial invoice for Customs Clearance.</small>		
Date: <b>04/08/2020</b>	<b>SZB</b>	

Print
1 sheet of paper

Destination ▼

Xprinter XP-460B  
Xprinter XP-460B  
RICOH Aficio MP C3300 PCL 6  
Save as PDF  
Save to Google Drive  
See more...

Paper size ▼

4 x 6

Pages per sheet ▼

1

Scale ▼

Default

Print using system dialog... (Ctrl+Shift+P)

Print
Cancel

---

# Thank You

---